NOKIA
CONNECTING PEOPLE

9238671
Printed in Mexico

Quick Start Guide

Thank you for purchasing the Nokia 6670 phone!

Use this guide to:

- Get familiar with your Nokia 6670 phone
- Install the SIM card and memory card
- Take pictures and record video
- Access Internet and email
- Organize and synchronize your data

NOKIA 6670

All screen images are simulated.

1 Check it out!

Back of phone

1. **Power key** Press and hold to turn phone on or off. Press and release to switch between profiles.
2. **Integrated Camera (1-megapixel) and Video Recorder** Snap and send pictures to share life's special moments.
3. **Five-way Scroll key** Move the Scroll key up, down, left, and right to navigate the menu system. Press down on the middle of the Scroll key to activate the currently selected item. From the Start screen, pressing the Scroll key in the middle accesses the Contacts list.
4. **Right and left Selection keys** Press to activate the menu option shown above the key. From the Start screen, these keys act as customizable shortcuts to your most commonly used features.
5. **Send key** Press to make a call to the name or number shown on the screen or to answer a call. Press the Send key once at the Start screen to access your recently dialed numbers.
6. **End key** Press to end a call or to decline an incoming call. Pressing the End key will also return you to the Start screen from any menu.
7. **Clear key** Press to clear the most recent keystroke.
8. **Menu key** Opens the main menu. Press and hold the Menu key for a list of open applications. (Your Nokia 6670 phone can run multiple applications at once, much like a computer.)
9. **Edit key** Use the Edit key to open a list of text-editing commands during text entry.

2 Get started.

With your Nokia 6670's battery fully charged, simply press and hold the Power key to turn the phone on. The first time the phone is turned on, the current date and time will need to be set.

fig. 2.2

fig. 2.3


fig. 2.1

The SIM card

Your Nokia 6670 phone uses a convenient SIM card (fig. 2.1) that holds information about your wireless service and contact information. If you already have a SIM card, you can transfer your service and contacts to your new Nokia 6670 phone simply by inserting the SIM. If you do not have a SIM card or service for the phone, contact your wireless provider.

fig. 2.4

The memory card

The memory card on your Nokia phone is a Reduced-Size Multimedia Card (RS-MMC). For your convenience, the RS-MMC comes with an adapter attachment that allows you to use the card in regular-sized MMC slots. **Remove this attachment prior to inserting the memory card**.

fig. 2.5

fig. 2.6

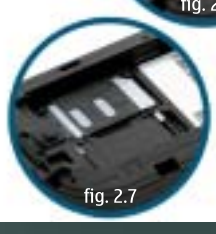
fig. 2.7

Insert the SIM card and memory card

1. Turn the phone off and remove the back cover (fig. 2.2).
2. Lift and remove the battery (fig. 2.3).
3. Slide the SIM card holder toward the bottom of the phone and lift the holder up (fig. 2.4).
4. Insert the SIM card into the slot, flat edge first, with the gold contacts facing the phone.
5. Press the SIM card down in to the slot and slide the card holder up to lock the SIM card in place (fig. 2.5).
6. Begin the memory card installation by removing the adapter attachment.
7. The memory card slot is to the right of the SIM card slot. Prepare to insert the memory card into the slot with the gold contacts facing downward and the beveled edge toward the bottom right corner of the phone (fig. 2.6).
8. First, insert the side of the memory card with gold contacts at an angle and slide into the slot on right side of the phone (fig. 2.7).
9. Snap the memory card into the slot by pressing down.
10. Replace the battery and the back cover.

3 Sharpen your business image.

With the Nokia 6670 phone, you have selected one of the first phones to include a 1-megapixel camera with 4X digital zoom. This means sharper images with better resolution and print quality. The camera also includes a video recorder with ability to capture up to 10 minutes of video. Use the Movie Director application to add your own special effects and music to your movie file.

fig. 3.1

fig. 3.2

fig. 3.3

Take a picture

1. Start the camera by pressing the left Selection key at the Start screen. ( )
   The camera opens with the default settings and the display screen becomes the viewfinder (fig. 3.1).
2. Press the left Selection key to view/change the camera Options. ( )
3. Use the Scroll key to zoom in and out by pressing up or down. ( )( )
4. Press the center of the Scroll key to take a picture. ( )
5. After taking the picture, press the left Selection key for *Options* or the right Selection key to go *Back* to taking pictures. ( )

Make a video

1. Start the camera by pressing the left Selection key at the Start screen. ( )
   The camera opens in image mode and the display screen functions as the viewfinder.
2. Press the Scroll key to the right to switch to Video mode (fig. 3.2). ( )
3. Press the Scroll key in the middle to being recording. ( )
4. To stop recording, press the right Selection key labeled *Stop*. The video is automatically saved to the Video clips folder in the Gallery. ( )
5. To continue taking videos, press the right Selection key labeled *Back*. ( ) To see a list of options, including playing and deleting the video, press the left Selection key labeled *Options* (fig. 3.3). ( )
6. When you are finished with the camera, press the right Selection key labeled *Exit*. ( )

4 Share your vision.

Multimedia messaging service allows you to create content-rich messages by combining images, text, and voice clips. Multimedia messages can be sent from one phone to another, and also from phone to email and vice versa.

fig. 4.1

Create and send a multimedia message

1. Open the phone menu by pressing the *Menu* key. ( )
2. Select *Messaging* from the main menu (fig. 4.1). ( )
3. Select *New message* from the Messaging menu. ( )
4. Select *Multimedia message* (fig. 4.2). ( )( )
5. With the *To:* box selected, press *Options* to retrieve a contact. ( )
6. Select *Add recipient*. ( )
7. Scroll to the desired contact and press *OK*. ( ) ( ) Select a mobile number or e-mail address.
8. Scroll down to edit the body of the message. ( )
9. Press *Options*. ( )
10. Scroll to and select *Insert object*. ( )( )
11. Select a media type (fig. 4.3). ( )
12. Select *Phone memory* or *Memory card* and press *OK*. ( )
13. Browse the folders to find the item you wish to insert (fig. 4.4). When you have found the desired image, sound clip, or video clip, press *Select*. ( )
14. You can continue to add content such as text or additional multimedia. When you are finished, press *Options*. ( )
15. Select *Send*. ( )

fig. 4.2

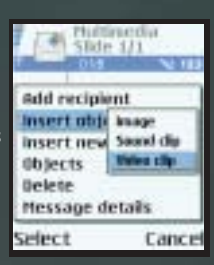

fig. 4.3

fig. 4.4

Note: Multimedia messaging and other services are network dependent. Contact your service provider or visit www.nokiausa.com/support/settings to configure your device.

5 Take your office with you.

With the Nokia 6670 email client, you can check and reply to mail even when you're out of the office. And you can view Word, Excel, and PowerPoint documents with ease on the large screen.

Configure your email settings

Before you use email, you must configure an appropriate access point, and define your email settings correctly. Follow the instructions given by your remote mailbox and Internet service provider, or visit www.nokiausa.com/support/settings for help.

Note: It is possible to set up multiple email addresses e.g. a separate address for friends, family, and work.

Select your mailbox

1. Open the phone menu by pressing the *Menu* key. ( )
2. Select *Messaging* from the main menu (fig. 5.1). ( )
3. Press *Options*. ( )
4. Scroll to and select *Settings*. ( )( )
5. Scroll to and select *E-mail*. ( )( )
6. Open *Mailbox in use* to select the mailbox you want to use (fig. 5.2). ( )( )

Retrieve your email

1. Open the phone menu by pressing the *Menu* key. ( )
2. Select *Messaging*. ( )
3. Scroll to and then select the *Work* mailbox. ( )( )
4. If you are offline, press *Options* and then select *Connect* to start a connection to a remote mailbox. ( )( )( )
5. Select *Options*. ( )
6. Scroll to and select *Retrieve e-mail* (fig. 5.3). ( )( )

Note: A Document Viewer application is available on the in-box MMC. This allows you to retrieve, open, or save Microsoft Word®, Excel®, and PowerPoint® attachments.

fig. 5.1

fig. 5.2

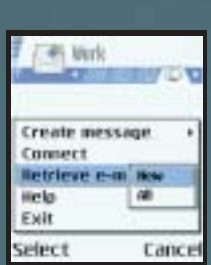

fig. 5.3

6 Manage your contacts.

The Nokia 6670 allows you to assign photos to your contacts. You can easily see who's calling by attaching a photo to their contact card. You can also assign ring tones to individual contacts, or play a custom audio file your create using your built-in sound recorder.

fig. 6.1

Attach a photo to your contacts

1. Open the phone menu by pressing the *Menu* key. ( )
2. Use the joystick to scroll to and select *Contacts* (fig. 6.1). ( )
3. Scroll to and select a contact name. ( )( )
4. Press *Options*. ( )
5. Scroll to and select *Edit* (fig. 6.2). ( )( )
6. Press *Options*. ( )
7. Select *Add thumbnail* (fig. 6.3). ( )
8. Select *Phone memory* or *Memory card* and press *OK*. ( )
9. Open the *Images* folder (fig. 6.4). ( )
10. Scroll to and select the desired image. ( )( )
11. Press the right Selection key to select *Done*. ( )

The next time an incoming call is received from this contact, the selected image will appear.

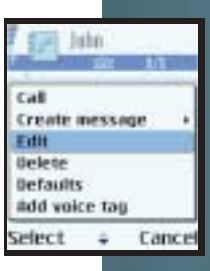

fig. 6.2

fig. 6.3

fig. 6.4

Assign a ring tone to your contacts

1. Repeat steps 1-4 from 'Attach a photo to your contacts'.
2. Scroll to and select *Ringing tone*. ( )( )
3. Scroll through the list of available tones. As each tone is highlighted, it will automatically play. ( )( )
4. Press *Select* to assign your new ring tone. ( )

7 Use it!

Sleek and sophisticated design
Sharper 1-megapixel imaging
Powerful organizational tool
Amazing creativity in communication

To learn more about other great features and enhancements of your Nokia 6670 phone, review the Nokia 6670 User Guide or visit www.nokiausa.com.

Copyright© 2005 Nokia. All rights reserved. Nokia, Nokia Connecting People, Nokia 6670, and the Nokia original accessories logo are trademarks or registered trademarks of Nokia Corporation. All screen images are simulated.